



Member of **Sumitomo Drive Technologies**

## **BACnet MSTP/Modbus RTU Data Cable Splitter**



### **BACnet data cable splitter**

The BACnet data cable splitter allows terminal block type connection of BACnet networks.

The Optidrive ODV-3 (Eco) product can be connected to a BACnet communications network using the on-board RJ45 port, alternatively this BACnet Data Cable splitter can be used as an alternative method of network cable termination.

The BACnet splitter also includes:

- RJ45 port for connection of remote keypad options or further Optidrives.

For further details on BACnet operation and the ODV-3 product please refer to the Optidrive Eco User Guide.

## User Guide

All rights reserved. No part of this User Guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by any information storage or retrieval system without permission in writing from the publisher.

Copyright Invertek Drives Ltd ©2024

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation.

The contents of this User Guide are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous improvement, the manufacturer reserves the right to change the specification of the product or its performance or the contents of the User Guide without notice.

## Compatibility


This Option is solely suitable for use on ODV-3 Eco Drives.

**NOTE** The splitter can also be used for Modbus network connection.

## Model Code

OPT-3-BNTSP-IN

## BACnet Port Connections

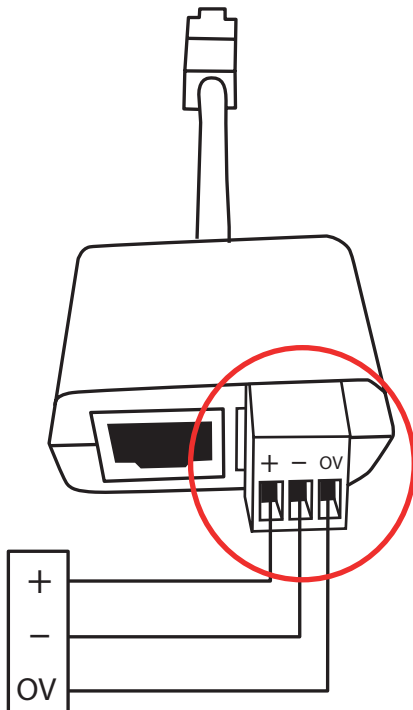


## Standards of Conformity

An Optidrive fitted with this Option complies with the following standards:


- CE-marked for Low Voltage Directive.
- IEC 664-1 Insulation Coordination within Low Voltage Systems.
- UL 840 Insulation Coordination for electrical equipment.
- EN50081-2 EMC Generic Emissions Standard, Industrial Level.
- EN50082-2 EMC Generic Immunity Standard, Industrial Level.
- Enclosure ingress protection, EN60529 IP00, NEMA 250.
- Flammability rating according to UL 94.

## RJ45 Port Connections

Pin	Function
1	Not Used
2	Not Used
3	0V
4	RS485- (Optibus)
5	RS485+ (Optibus)
6	+24V
7	RS485- (Modbus/BACnet)
8	RS485+ Modbus/BACnet)

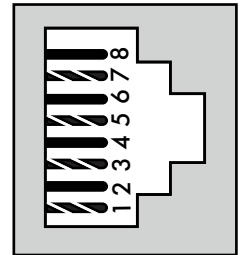


## Dimensions

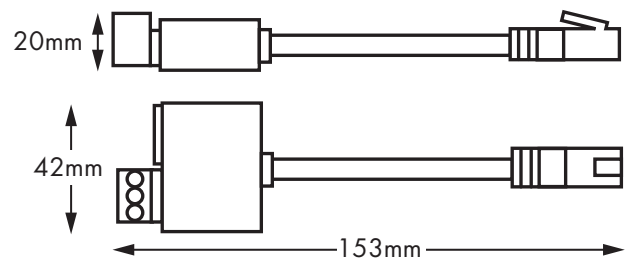

## Diagram 1 - Example of Using the Splitter

Shielded data cables should be used wherever possible.

The shield should be grounded at the controller/router, furthermore the shield should be maintained the full length of the cable.

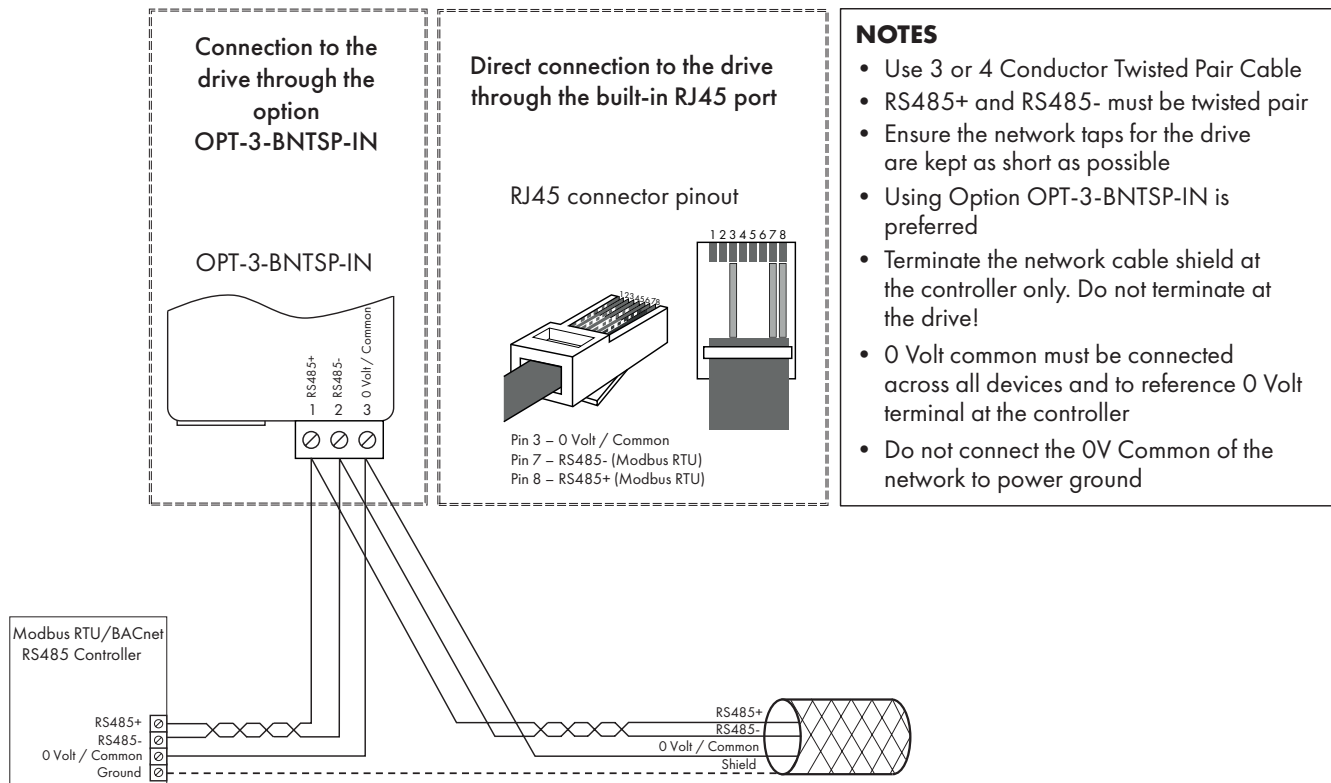

## Important Safety Information

This option is specifically designed to be used with the Optidrive variable speed drive product and is intended for professional incorporation into complete equipment or systems. If installed incorrectly it may present a safety hazard. The Optidrive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control mechanical plant that may cause injury. Close attention is required to system design and electrical installation to avoid hazards in either normal operation or in the event of equipment malfunction.

System design, installation, commissioning and maintenance must be carried out only by personnel who have the necessary training and experience. They must read carefully this safety information and the instructions in this Guide and follow all information regarding transport, storage, installation and use of the Option module, including the specified environmental limitations.

## Safety Notices

**WARNING** is given where there is a hazard that could lead to injury or death of personnel.

**CAUTION** is given where there is a hazard that could lead to damage to equipment.

It is the responsibility of the installer to ensure that the equipment or system into which the product is incorporated complies with the EMC legislation of the country of use. Within the European Union, equipment into which this product is incorporated must comply with 89/336/EEC, Electromagnetic Compatibility.

**WARNING** Within the European Union, all machinery in which this product is used must comply with the Directive 89/392/EEC, Safety of Machinery. In particular, the equipment should comply with EN60204-1.

### CAUTION

- Store the Option in its box until required. It should be stored in a clean and dry environment. Temperature range  $-40^{\circ}\text{C}$  to  $+60^{\circ}\text{C}$ .
- Install the splitter into the Optidrive by inserting the RJ45 plug into the RJ45 port of the Optidrive. (See Diagram 1).

### WARNING

- Optidrives and the Options should be installed only by qualified electrical persons and in accordance with local and national regulations and codes of practice.
- **Electric shock hazard!** Disconnect and **ISOLATE** the Optidrive before attempting any work on it. High voltages are present at the terminals and within the drive for up to 10 minutes after disconnection of the electrical supply.
- Where the electrical supply to the drive is through a plug and socket connector, do not disconnect until 10 minutes have elapsed after turning off the supply.

## Warranty

Complete Warranty Terms and Conditions are available upon request from your IDL Authorised Distributor.



82-BNTSP-IN\_V2.00

**Invertek Drives Ltd.** Offa's Dyke Business Park, Welshpool, Powys SY21 8JF United Kingdom

Tel: +44 (0)1938 556868 Fax: +44 (0)1938 556869

[www.invertekdrives.com](http://www.invertekdrives.com)